


1 Remove door lining (72-105).


2 Clamp down release lever on lock with a wedge to provide enough clearance between trigger foot and release lever.

Note: Perform all assembly jobs through righthand assembly opening of back door.

3 Unscrew upper fastening screw on back door lock.

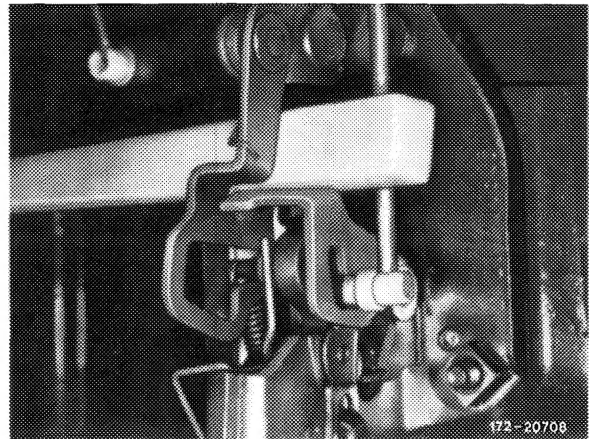


4 Insert screwdriver through bore for upper lock attachment and turn adjusting screw for relief clearance to the right until trigger foot slides out of snap lock onto screwdriver.

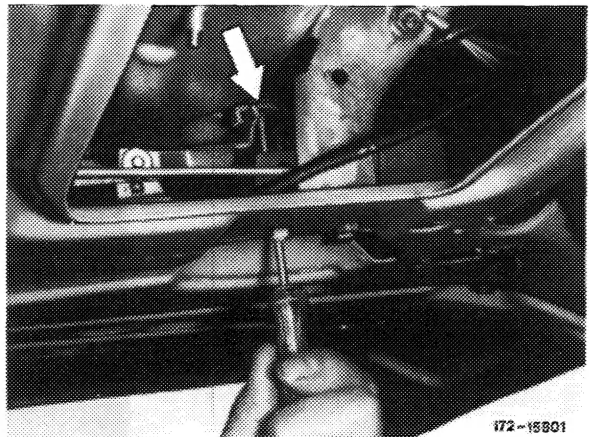

5 Lift trigger foot from screwdriver by means of pliers (e. g. straight external circlip pliers with return spring) and remove.


6 Place **modified** trigger foot on screwdriver by means of pliers.

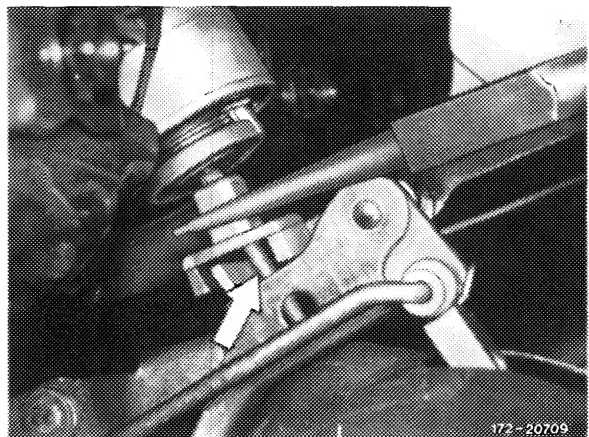

Note: Insert trigger foot in such a manner that the **chamfered driving lug is below**.

7 Push in snap lock from outside until trigger foot slides into receiving hole of snap lock, while turning adjusting screw to the left.

8 Adjust relief clearance (72–255).

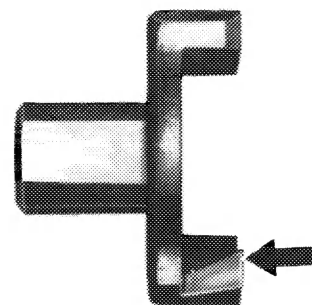

172 – 20710

9 Install door lining (72–105).